


ITS-300 Assembly instructions

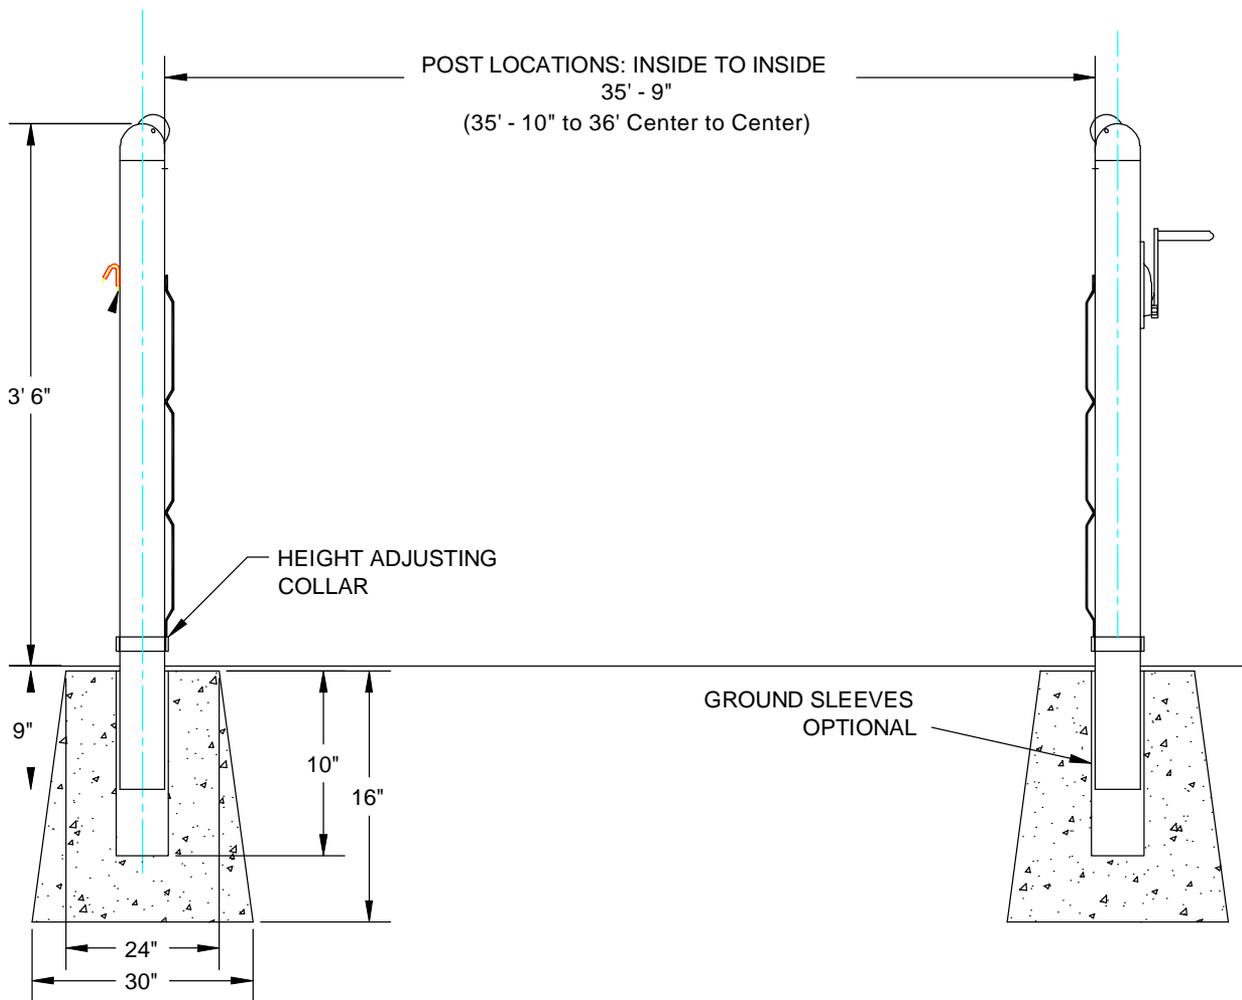

1. When installing Post, make sure the height of the post is 1" above the net cord. The height will be about 3'-6" above the court surface.
2. The ITS-300 system is designed to fit in existing 3" ID Floor Sleeves or Jaypro's PVB-70S Floor Sleeve (see PVB-70S installation instructions).
3. Adjust height of Post and lock in place with the Adjusting Collars at the base of each post.



Net Installation:

1. Stretch out the net across the court.
2. Since this Post is internally wound, cut off the loop at one end of the cable for the take up side. Insert the plain end over the pulley and down into the post, threading it through the barrel of the winch.
3. Attach the loop on the other end of the cable to the hook on the outside of the static post.
4. Turning the handle clockwise, crank up cable so center of the net is approximately 38".

DO NOT OVER TIGHTEN .

5. Square up the Net and tie off the head band around each post.
6. Lace rest of the Net to the post using the black lacing cord through the grommets on the end bands and the lacing rods on the side of the posts.
7. If using a center strap, adjust the height at center to 36".
8. Your installation is now complete and your net is ready for play.

